

Disinfecting the Air of Impurities & Odours


Protect yourself from airborne germs with the **MARS S300 Commercial Disinfection Unit with HEPA Filter**. To improve a buildings' air quality, this unit is ideal for retail spaces, classrooms, schools & offices.

The **MARS S300** disinfects and captures airborne contaminants, odors and particles using a stand-alone unit. Using a four-step air cleaning process:

1. Mold, virus and bacteria are pulled past a J-shaped dual wavelength lamp parallel to airflow inside an aluminum reflection chamber, for maximum UVC disinfection of airborne contaminants.
2. Odors and VOCs are eliminated via photo-oxidation.
3. A MERV 8 pre-filter captures large particles.
4. A HEPA final filter captures 99.97% of particles of 0.3 micron and larger.

Benefits:

1. Combines HEPA filtration and UVC disinfection for a complete IAQ solution in one unit
2. Eliminates unpleasant odors
3. Equipped with dual speed fan capability
4. Offers versatile installation options
5. Light weight and easily transportable

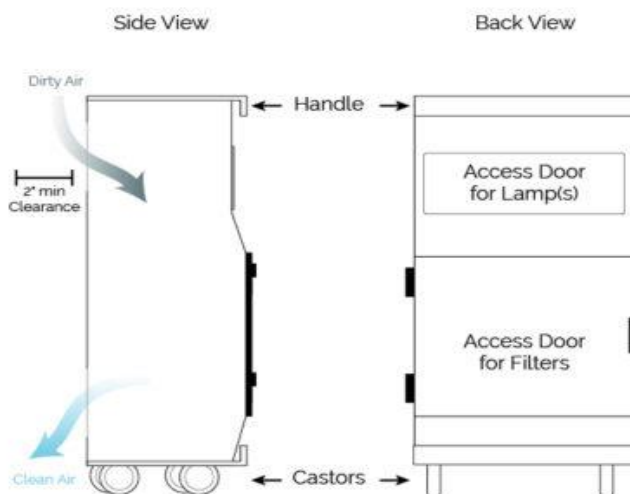

Made in  Canada